



CATALOGO DE PARTES
SYM JET 140











XC15W



LO QUE TE MUEVE



引擎部品目錄

          CONTENTS-ENGINE GROUP

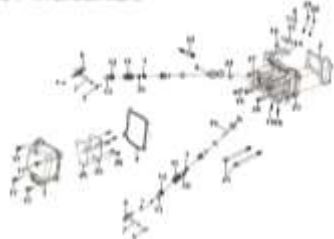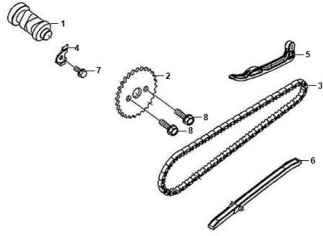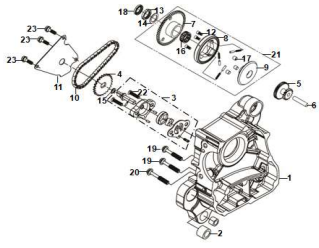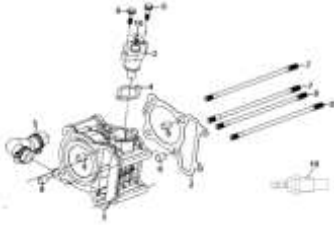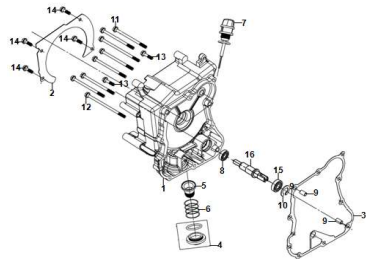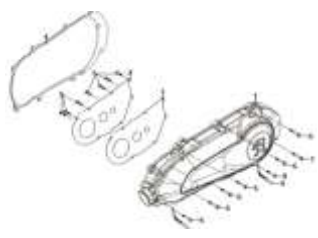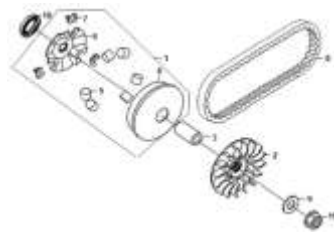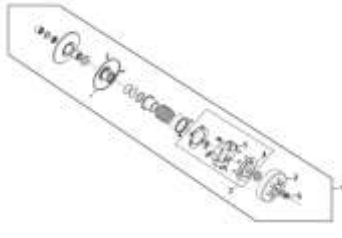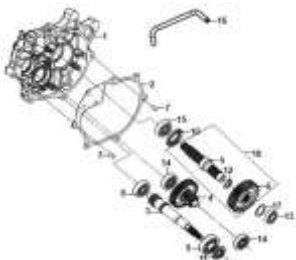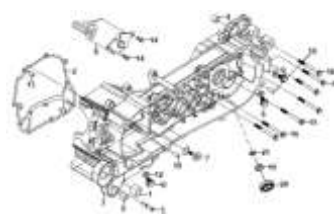E01 WATER PUMP 	E02 CYLINDER HEAD 	E03 CAM SHAFT&CYL. HEAD L. SIDE COVER 
E04 R CRANK CASE&OIL PUMP ASSY 	E05 CYLINDER 	E06 R. CRANK CASE COVER 
E07 AC GEN. ASSY 	E08 L. CRANK CASE COVER 	E09 MOVABLE DRIVE FACE ASS'Y 
E10 DRIVEN PULLEY ASS'Y 	E11 MISSION CASE&DRIVE SHAFT 	E12 L. CRANK CASE 












引擎部品目錄

  CONTENTS-ENGINE GROUP

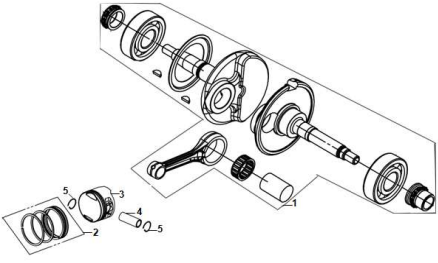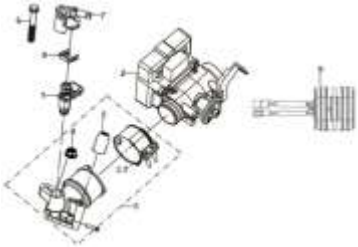E13 CRANK SHAFT	E14 ECU Set	
		






車架部品目錄

           
CONTENTS-FRAME GROUP

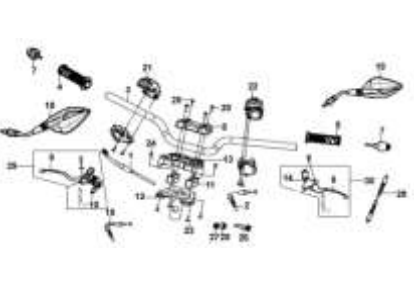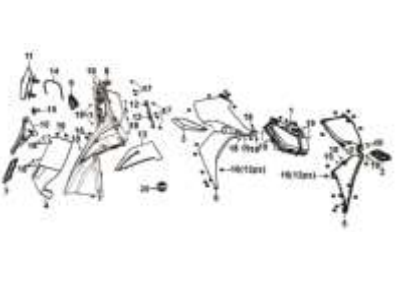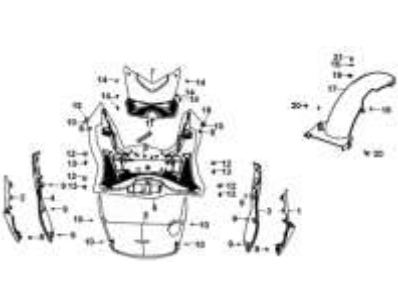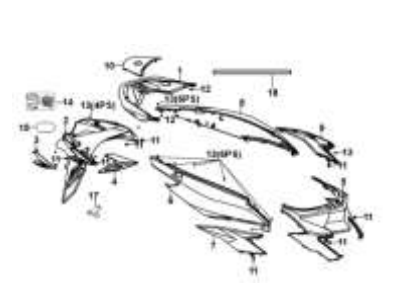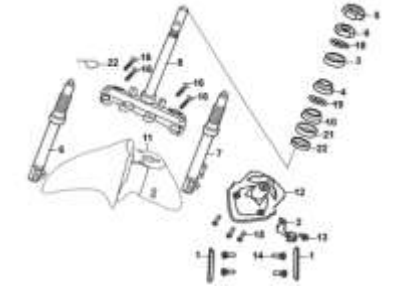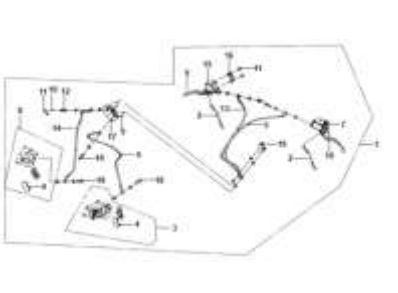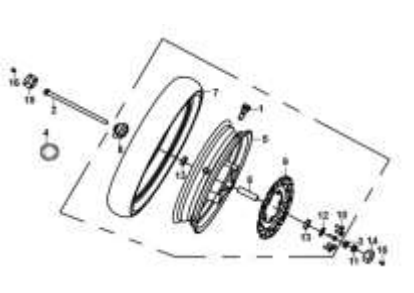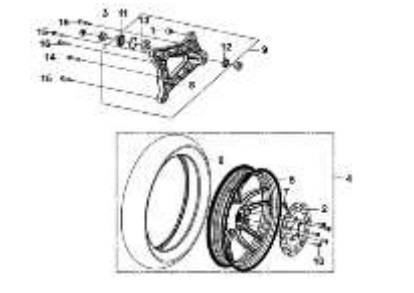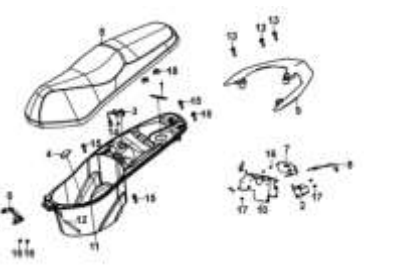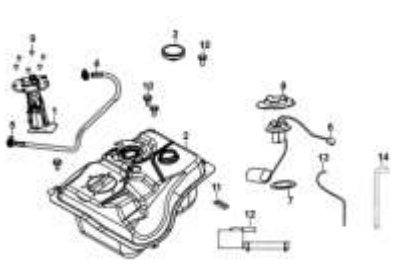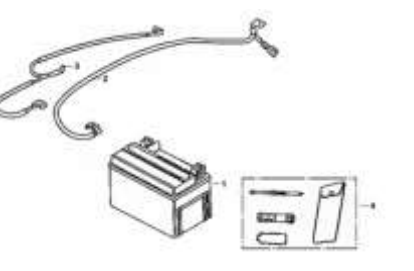F01 Meter • Wind screen	F02 Cable • Switch • Handle Lever	F03 Front cover • Inner box
		
F04 Floor Panel • Center Cover	F05 Body Cover	F06 Steering Stem • Front Cushion
		
F07 Brake System ASSY	F08 Front Wheel	F09 Rear Wheel
		
F10 Seat • Rear Grip	F11 Fuel Tank	F12 Battery • Tool Box
		

車架部品目錄

     
CONTENTS-FRAME GROUP

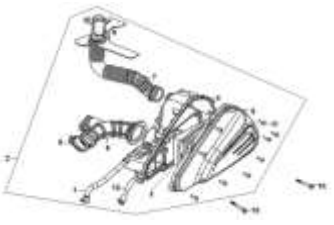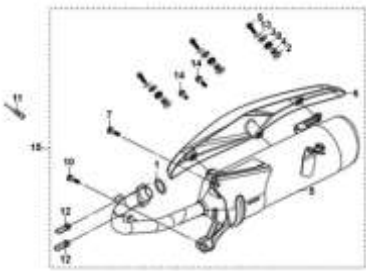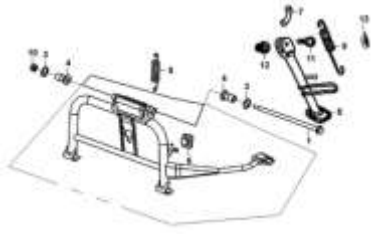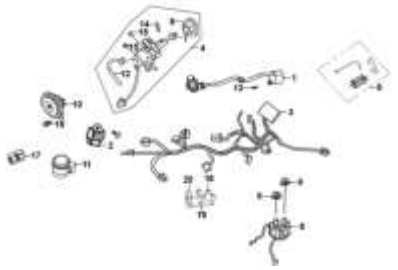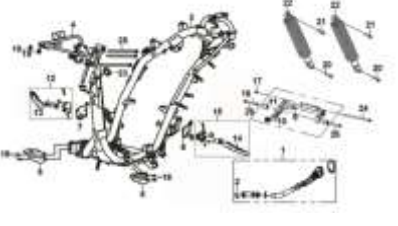F13 Air Cleaner	F14 Exhaust Muffler	F15 Main Stand • Kick Starter Arm
		
F16 Wire Harness	F17 Frame Body • Engine Hanger	
		

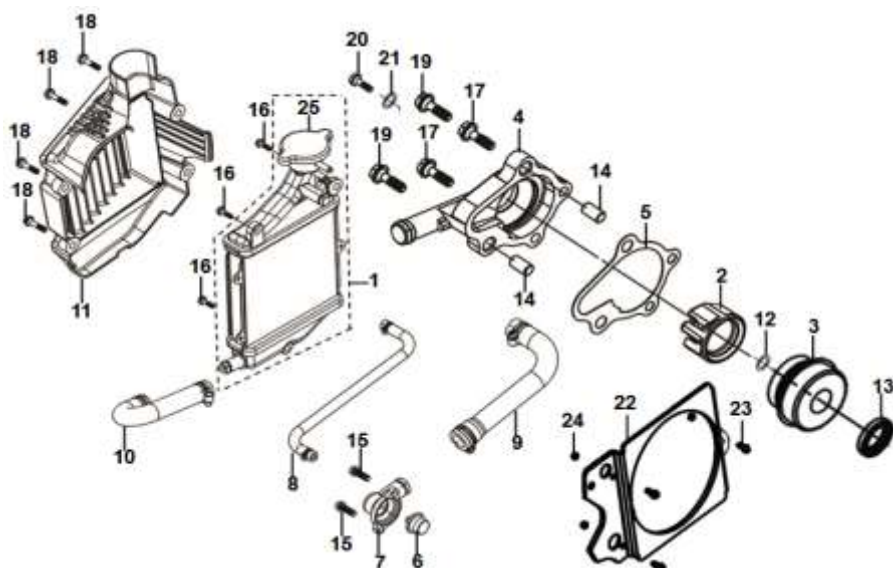 


Pictures reference only

NO	PARTS NUMBER	DESCRIPTION-ZH	DESCRIPTION	QTY	EFFECTIVE DATE
01	19000-MA2-000	散热器总成	Radiator COMP.	1	21/11/2020
02	19215-MA1-000	水泵叶轮轴	Water pump impeller	1	
03	19217-H9A-300	机械密封圈	Mechanical seal	1	
03	19217-TL1-300	机械密封圈	Mechanical seal	1	
04	19220-MA1-000	水泵总成	Water pump cover COMP.	1	
05	19229-MA2-000	水泵垫片	Water pump gasket	1	
06	19300-MA1-000	恒温器	Thermostat ASSY.	1	
07	19315-MA1-000	恒温器盖	Thermostat cover	1	
08	19320-MA1-000	水管	Water tube	1	
09	1951A-MA1-000	节流器管总成	Thermostat hose ASSY.	1	
10	1952A-MA1-000	水管C总成	Water hose c ASSY.	1	
11	19610-MA2-000	风扇盖	Fan cover	1	
12	90423-KJ9-000	垫圈7.2*13*1.2	Washer 7.2*13*1.2	1	
13	91205-KF0-003	O环12*20*5	Oil seal 12*20*5	1	
14	94301-08140	固定销8X14	Dowel pin 8X14	2	
15	96001-06016-08	六角缘面螺栓6*16	Flange bolt SH 6*16	2	
16	96001-06020-02	六角缘面螺栓6*20	Flange bolt SH 6*20	3	
17	96001-06022-02	六角缘面螺栓6*22	Flange bolt SH 6*22	2	
18	96001-06025-07	六角缘面螺栓6*25	Flange bolt SH 6*25	4	
19	96001-06030-02	六角缘面螺栓6*30	Flange bolt SH 6*30	2	
20	96001-06010-00	六角缘面螺栓6*10	SH. flange bolt 6*10	1	
21	90441-D1A-A00	垫片6mm	Sealing washer 6mm	1	
22	19520-MA2-000	风扇罩	Fan shroud	1	
23	90004-P9A-000	内六角缘面螺栓5*12	Socket flange bolt5*12	1	
24	90032-ZBC-000	U形打点螺母5MM	U nut 5mm	1	
25	19100-MA2-000	散热器盖	Radiator cap	1	

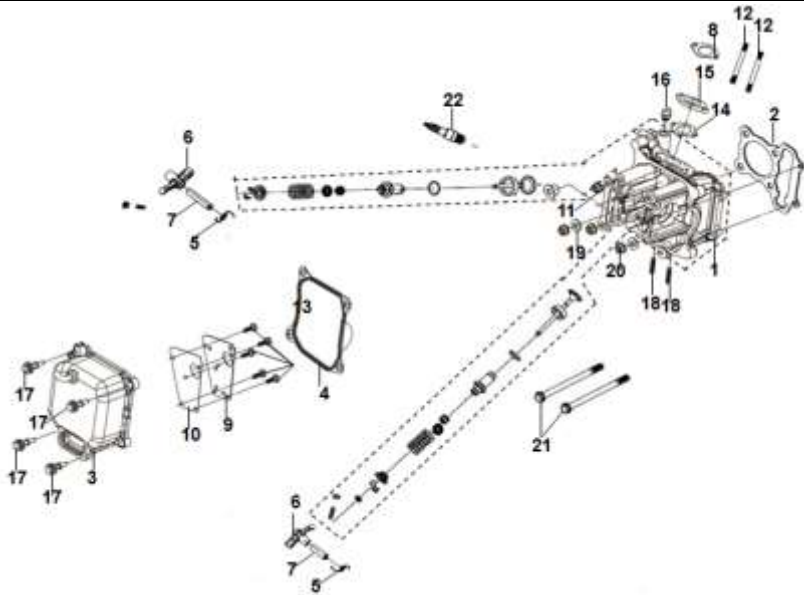 


Pictures reference only

NO	PARTS NUMBER	DESCRIPTION-ZH	DESCRIPTION	QTY	EFFECTIVE DATE
01	1220C-ZBC-000	汽缸头总成	Cylinder head COMP.	1	
02	12251-MA2-000	缸头垫片	Cylinder head gasket	1	
03	12301-MA1-000	气缸头盖总成	Cylinder head cover ASSY.	1	
04	12391-MA1-000	缸头盖密封圈	Head cover packing	1	
05	14439-F62-010	摇臂弹簧	Rocker arm torsion spring	2	
06	1443A-MA1-010	气门摇臂	Valve rocker arm	2	
07	14452-MA1-000	摇臂轴	Rocker arm shaft	2	
08	16201-MA2-000	化油器接头垫片	CARB. insulator gasket	1	
09	12302-MA1-000	通气隔离板	Breather separate plate	1	
10	12308-MA2-000	隔离板垫片	Separating plate gasket	1	
11	12392-MA1-000	汽缸头支架	Cylinder head stay	1	
12	92900-06050-0E	双头螺栓6*50	STUD. bolt 6*50	2	
13	93903-34120	盘头螺丝4*8	Tapping screw 4*8	5	
14	16201-MA2-000	化油器接头垫片	CARB. insulator gasket	1	
15	16211-MA1-000	化油器接头	CARB. insulator	1	
16	37880-HLK-900-M1	缸头温度感知器	CYL. head TEMP. sensor	1	
17	9000A-BHA-000	气缸头盖螺栓	Head cover bolt	4	
18	90034-HMA-000	特殊双头螺栓8*40	Special STUD bolt 8*40	2	
19	90442-028-000	密封垫片8MM	Sealing washer 8MM	2	
20	94050-08080-G1	缘面螺帽8MM	Flange nut 8MM	4	
21	96001-06095-08	六角缘面螺栓6*95	Flange sh bolt 6*95	2	
22	1PCR7HSA	火星塞	PLUG. spark(NGK CR7HSA)	1	

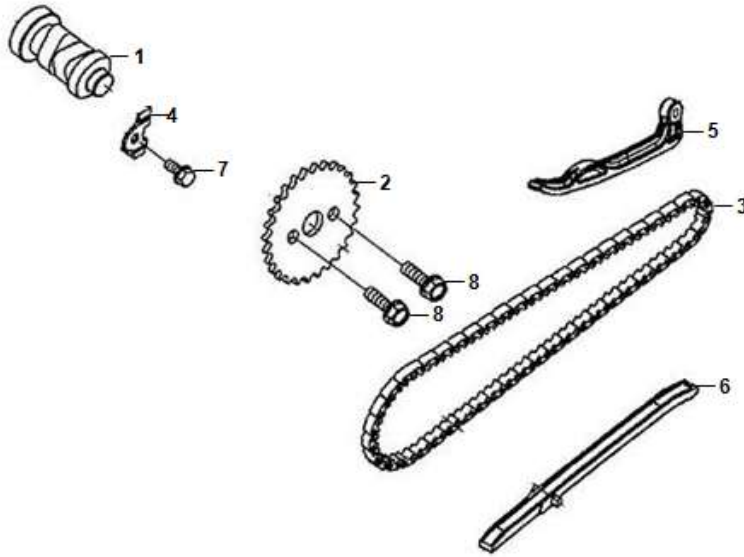 


Pictures reference only

 [illegible]

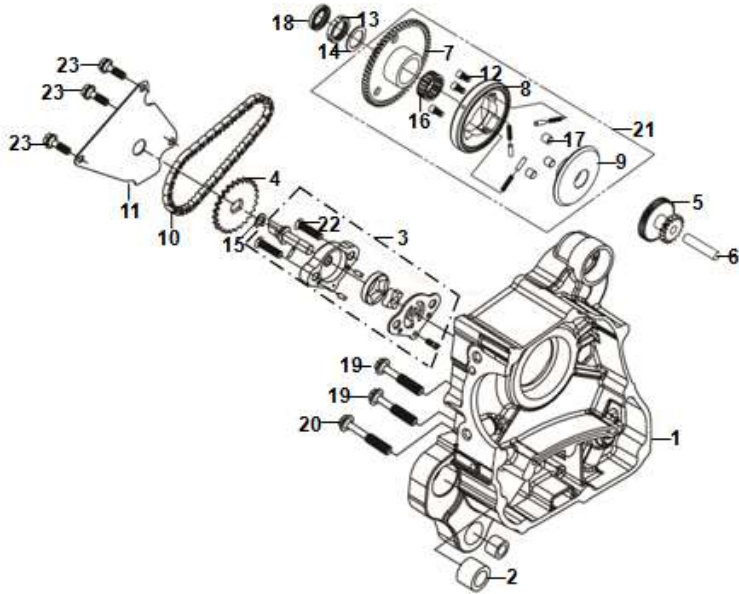


Pictures reference only

NO	PARTS NUMBER	DESCRIPTION-ZH	DESCRIPTION	QTY	EFFECTIVE DATE
01	11100-MA1-000	右曲轴箱组	R. crank case COMP.	1	
02	11102-M9Q-300	引擎悬吊橡皮衬套	ENG. hanger rubber bush	1	
03	15100-MA1-000	油泵总成	Oil pump ASSY.	1	
04	15133-HMA-000	油泵驱动齿轮	Oil pump driven gear	1	
05	28101-GY6-900	起动减速齿轮	Starter reduction gear	1	
06	28102-GY6-900	起动减速齿轮轴	Start. red. gear shaft	1	
07	28110-VVC-000	起动离合器齿轮组	Start. clutch gear COMP	1	
08	28123-XJA-000	起动离合器外圈	Outer ring	1	
09	28125-MA2-000	起动离合器凸缘组	Starting clutch flange COMP.	1	
10	15141-MA1-000	油泵链条54L	Oil pump drive chain 54L	1	
11	15711-MA1-000	油泵挡片	Oil pump separator	1	
12	90002-XJA-000	内六角螺栓6*10	Socket bolt 6*10	3	
13	90201-GY6-900	锁付螺帽22MM	Lock nut 22MM	1	
14	90403-M92-000	舌状垫片22.2*31*1.5	Thrust washer 22.2*31*1.5	1	
15	94510-10000	C夹10MM	C-clip10mm	2	
16	91104-M9Q-000-M2	滚针轴承28*32*17	Needle bearing 28*32*17	1	
17	91105-VUA-010	滚子10*10	Roller 10*10	3	
18	91201-M9Q-300-M2	油封19.8*30*5	Oil seal 19.8*30*5R	1	
19	96001-06045-00	缘面螺栓6*45	Flange bolt 6*45	2	
20	96001-06055-08	缘面螺栓6*55	Flange bolt 6*55	1	
21	2812A-MA2-000	起动离合器总成	Starting clutch outer ASSY.	1	
22	93600-06025-0H	螺钉6*25	Flate screw 6*25	2	
23	96001-06012-08	六角缘面螺栓6*12	SH. flange bolt 6X12	3	

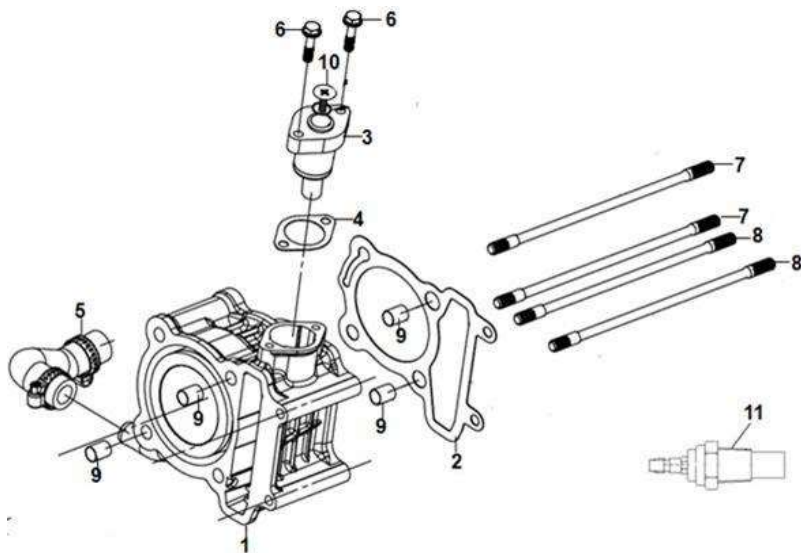 


Pictures reference only

NO	PARTS NUMBER	DESCRIPTION-ZH	DESCRIPTION	QTY	EFFECTIVE DATE
01	12100-MA2-000	汽缸	Cylinder COMP.	1	
02	12191-MA2-000	汽缸垫片	Cylinder gasket	1	
03	14520-GY6-901	链条导具总成	Tensioner lifter ASSY.	1	
04	14523-Z8G-000	链条导具垫片	Tensioner lifter gasket	1	
05	1950A-MA1-000	水管A总成	Water hose A ASSY	1	
06	96001-06022-08	六角缘面螺栓6*22	SH. flange bolt 6X22	2	
07	90031-M92-000	汽缸双头螺栓A	Cylinder stud bolt A	2	
08	90032-A6A-000	汽缸双头螺栓B	Cylinder stud bolt B	2	
09	90703-M8Q-000	定位销10*14	Dowel pin 10*14	4	
10	90005-KW1-900	盘头螺钉6*6	Pan screw 6*6	1	
11	37750-PC1-004-E2	温度计量器总成	THERMO UNIT ASSY.	1	

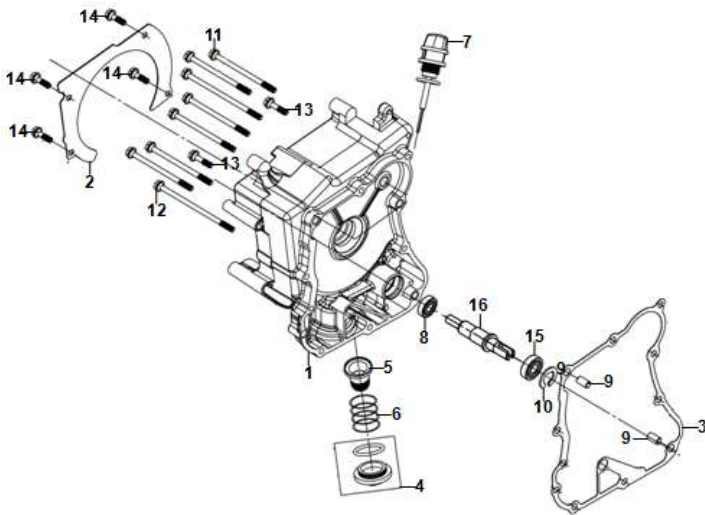 


Pictures reference only

NO	PARTS NUMBER	DESCRIPTION-ZH	DESCRIPTION	QTY	EFFECTIVE DATE
01	11331-MA1-010	右曲轴箱盖	R. crank case cover	1	
02	11336-MA1-000	右盖板	R.cover plate	1	
03	11394-MA2-000	右盖垫片	R. cover gasket	1	
04	1236A-M9T-000	机油泄油孔盖总成	Tappet adjusting hole cap ASSY.	1	
04-1	12361-M9Q-000	机油泄油孔盖	Tappet adjusting hole cap	1	
04-2	91302-M9T-000	O环30.8*3.2	O-ring 30.8*3.2	1	
05	15421-H66-000	滤油网	Oil filter screen	1	
06	15426-M9Q-000	滤油网弹簧	Oil fillter screen SPG.	1	
07	1565A-X81-000	油量表	Oil level gauge	1	
08	91001-KJ9-005	轴承6901	Radial ball BRG. 6901	1	
09	94301-08140	定位销8*14	Dowel pin 8*14	2	
10	94520-26000	环夹	CIR. crip 26MM	1	
11	96001-06095-08	缘面螺栓6*95	Flange sh bolt 6*95	6	
12	96001-06100-08	六角缘面螺栓6*100	SH flange bolt 6*100	2	
13	96001-06030-08	六角缘面螺栓6*30	SH. flange bolt 6*30	2	
14	96001-06012-08	六角缘面螺栓6*12	SH flange bolt 6*12	4	
15	96100-60000	轴承6000	Radial ball bearing 6000	1	
16	19231-MA1-000	水泵轴	Water pump shaft	1	

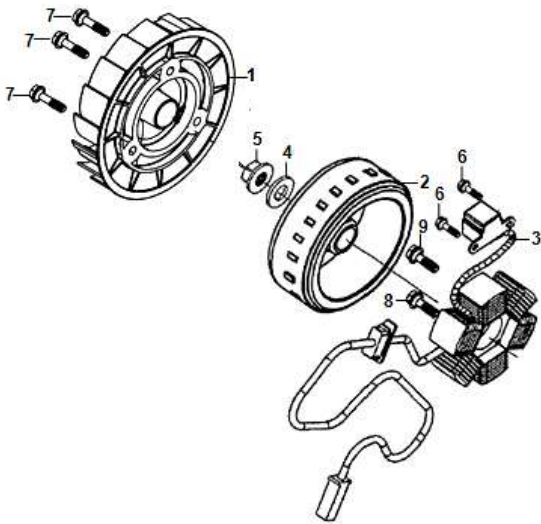 


Pictures reference only

NO	PARTS NUMBER	DESCRIPTION-ZH	DESCRIPTION	QTY	EFFECTIVE DATE
01	19510-MA2-000	冷却风扇组	Cooling fan COMP.	1	
02	31110-MA1-000	飞轮组	Flywheel COMP	1	
03	31120-MA1-000	线圈组	Stator COMP.	1	
04	90440-166-000	平面垫片12MM	Plain washer 12MM	1	
05	94050-12000	缘面螺帽12MM	Flange nut 12MM	1	
06	92101-05012-0A	六角螺栓5*12MM	HEX bolt 5*12mm	2	
07	96001-06018-08	缘面螺栓6*18	Flange bolt 6*18	3	
08	96001-06028-08	六角缘面螺栓6*28	SH. flange bolt 6*28	1	
09	96001-06020-00	六角缘面螺栓6*20	SH. flange bolt 6*20	1	

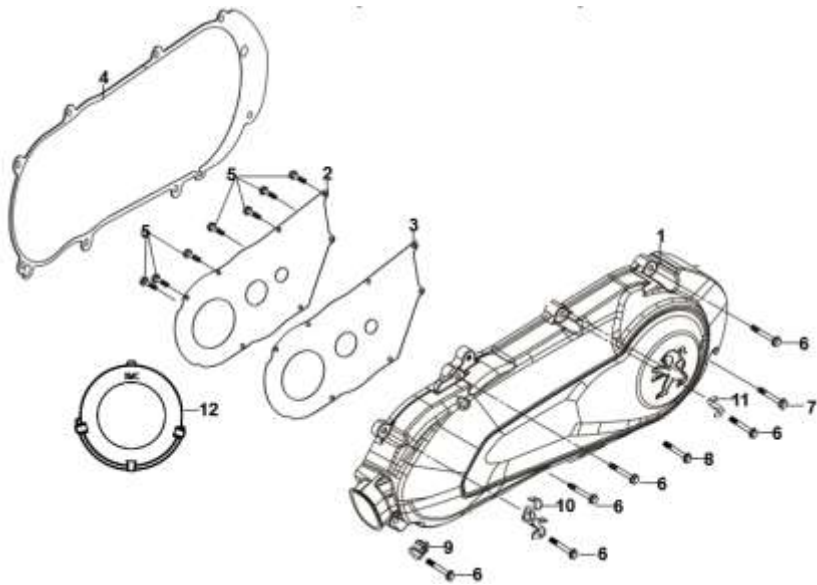 


Pictures reference only

NO	PARTS NUMBER	DESCRIPTION-ZH	DESCRIPTION	QTY	EFFECTIVE DATE
01	11341-X81-000	左曲轴箱盖	L. crank case cover	1	
02	11342-ARA-000	左盖盖板	L. side cover plate	1	
03	11343-XRB-000	左盖盖板垫片	L. side cover plate gasket	1	
04	11395-XRB-000	左盖垫片	L. cover gasket	1	
05	92101-05012-0A	六角螺栓5*12MM	HEX bolt 5*12mm	7	
06	96001-06028-00	六角缘面螺栓6*28	SH. flange bolt 6*28	6	
07	96001-06035-00	六角缘面螺栓6*35	SH. flange bolt 6*35	1	
08	96001-06020-00	六角缘面螺栓6*20	SH. flange bolt 6*20	1	
09	11383-GY6-A00	空滤器泄油管夹	AIR/C drain tube clammer	1	
10	11382-X8A-000	管夹	Tube clammer	1	
11	11382-ARB-000	刹车线夹B	Brake cable clip B	1	
12	11347-XMC-000	导风盘	Air guide plate	1	

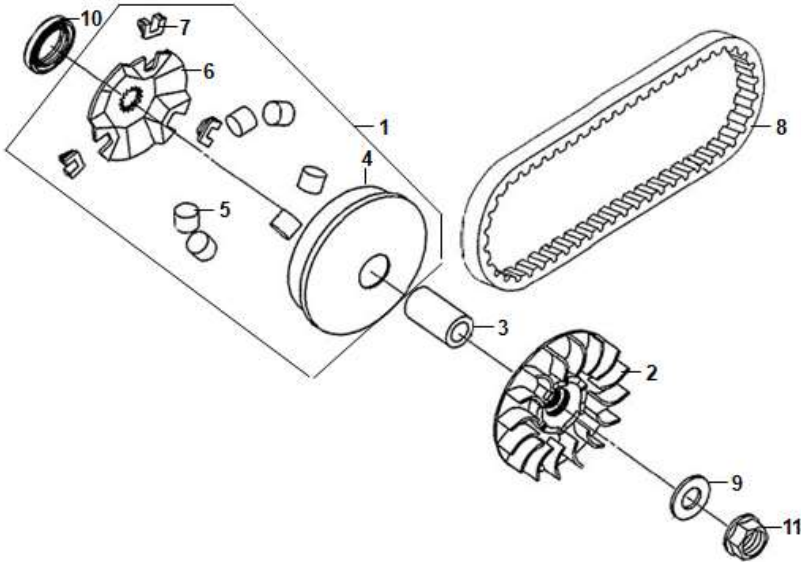 


Pictures reference only

NO	PARTS NUMBER	DESCRIPTION-ZH	DESCRIPTION	QTY	EFFECTIVE DATE
01	2211A-X92-000	滑动驱动盘总成	Movable drive face ASSY.	1	
02	22102-HJA-000	驱动盘组	Drive face COMP.	1	
03	22105-MA1-000	驱动盘衬套	Drive face boss	1	
04	22110-MA1-000	滑动驱动盘组	Movable drive face COMP.	1	
05	22121-X92-000	配重滚子	Weight roller COMP.	6	
06	22131-MA1-000	斜板	Ramp plate	1	
07	22132-RA1-000	滑动片	Slide piece	3	
08	1B01ZBC02	驱动皮带	Drive belt	1	
09	90440-166-000	平垫12MM	Plain washer 12MM	1	
10	91204-HMA-000-M2	油封25*40*7	Oil seal 25*40*7	1	
11	94050-12000	缘面螺帽12MM	Flange nut 12MM	1	

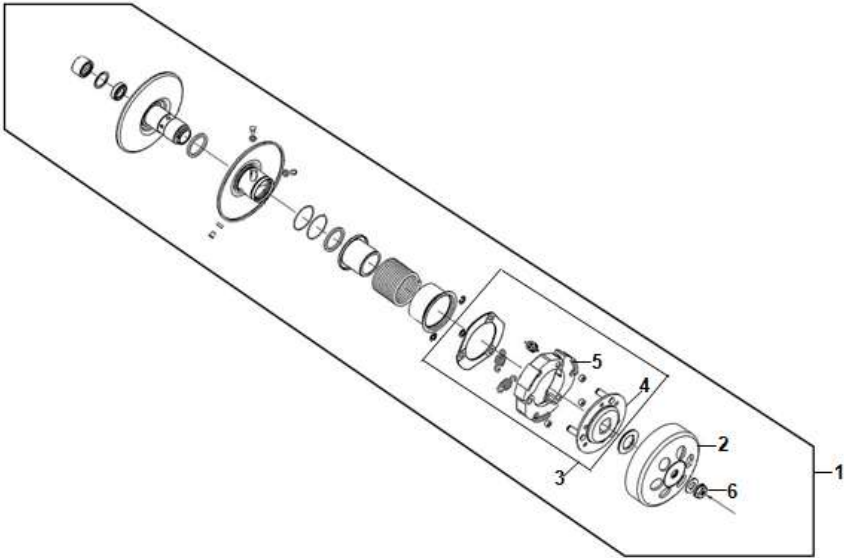 


Pictures reference only

NO	PARTS NUMBER	DESCRIPTION-ZH	DESCRIPTION	QTY	EFFECTIVE DATE
01	2301A-MA1-000	传动皮带盘	Driven pulley set	1	
02	22101-M9Q-000-M1	离合器外套组	Clutch outer	1	
03	22300-F6A-000	离合器压板总成	Drive plate ASSY.	1	
04	22350-F62-000	离合器压板	Drive plate COMP.	1	
05	22530-F62-000-A	离合器片	Clutch weight (1SET=3PCS)	1	
06	94050-12000	缘面螺帽12MM	Flange nut 12MM	1	

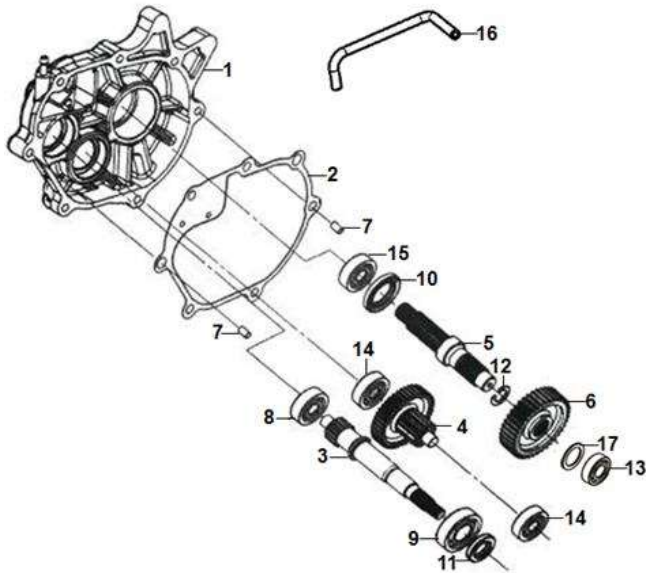 


Pictures reference only

NO	PARTS NUMBER	DESCRIPTION-ZH	DESCRIPTION	QTY	EFFECTIVE DATE
01	21200-ZBC-000	变速箱组	Mission case COMP.	1	
02	21395-MA2-000	变速箱盖垫片	Mission cover gasket	1	
03	23411-ZBC-010	驱动轴	Drive shaft	1	
04	23420-Z7P-010-M2	副轴组	Counter shaft COMP.	1	
05	23431-AR1-000	最终轴	Final shaft	1	
06	23432-AJF-000	最终齿轮42T	Final gear 42T	1	
07	90703-M8Q-000	定位销10*14	Dowel pin 10*14	2	
08	91003-M8Q-000-TPI	轴承CSB301	Radial ball BRG. CSB301	1	
09	91104-KN7-670-M2	轴承CSB204	Radial ball BRG. CSB204	1	
10	91203-A6A-000	油封34*52*8	Oil seal 34*52*8	1	
11	91202-KJ9-003-M1	油封20*32*6	Oil seal 20*32*6	1	
12	94510-25000	外环夹25MM	EX. cir-clip 25MM	1	
13	96100-62033-10	轴承6203	Radial ball BRG. 6203	1	
14	96100-63013-00	轴承6301	Radial ball BRG 6301	2	
15	96150-62050-10	轴承6205	Ball radial bearing 6205	1	
16	11221-ANL-000	变速箱通气管	Mission breather tube	1	
17	90401-ANL-000	垫片17*30*1	Washer 17*30*1	1	

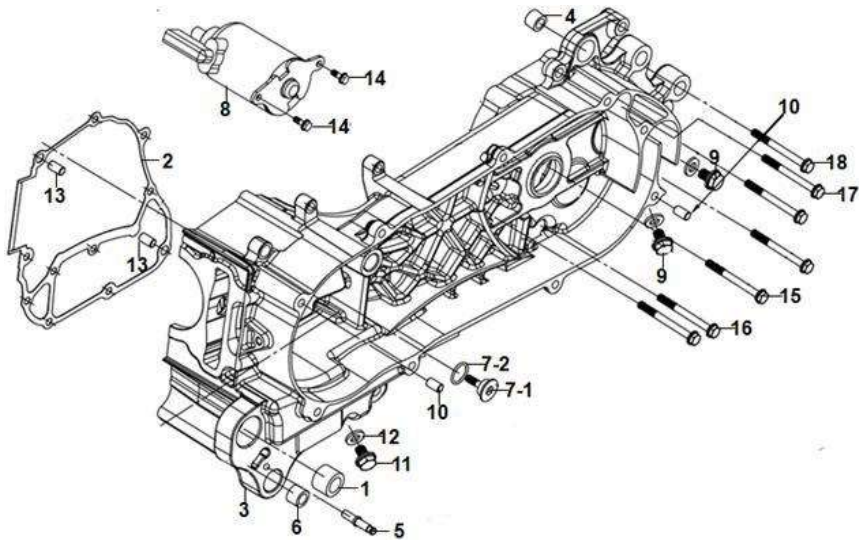 


Pictures reference only

NO	PARTS NUMBER	DESCRIPTION-ZH	DESCRIPTION	QTY	EFFECTIVE DATE
01	11102-M9Q-300	引擎悬吊橡皮衬套	ENG. hanger rubber bush	2	
02	11192-MA2-000	右曲轴箱垫片	R. crank case gasket	1	
03	11200-ZBC-000	左曲轴箱组	L. crank case COMP.	1	
04	11203-M9Q-300	后避震下悬吊橡皮	RR. CUSH. UN. rubber bush	1	
05	11204-ABA-000	弹簧挂钩	Spring hook pin	1	
06	11205-F6A-300	主脚架衬套	Main stand bush	1	
07-1	14531-M9Q-000	凸轮链条枢轴	Cam chain tensioner pivot	1	
07-2	91301-GR0-003	O环15.2*1.5	O-ring 15.2*1.5	1	
08	31200-ARA-000	起动马达总成	Start motor ASSY.	1	
09	90103-KN8-000	特殊螺栓8MM	Special bolt 8MM	2	
10	90703-M8Q-000	定位销10*14	Dowel pin 10*14	2	
11	92800-12000	泄油螺栓12MM	Drain plug bolt 12MM	1	
12	94109-12000	泄油螺栓垫片12MM	Plug drain washer 12mm	1	
13	94301-08140	定位销8*14	Dowel pin 8*14	2	
14	96001-06016-08	六角缘面螺栓6*16	SH. flange bolt 6*16	2	
15	95701-08055-00	缘面螺栓8*55	Flange bolt 8*55	2	
16	95701-08060-00	六角缘面螺栓8*60	SH. flange bolt 8*60	1	
17	95701-08065-00	缘面螺栓8*65	Flange bolt 8*65	3	
18	95701-08068-00	缘面螺栓8*68	Flange bolt 8*68	1	

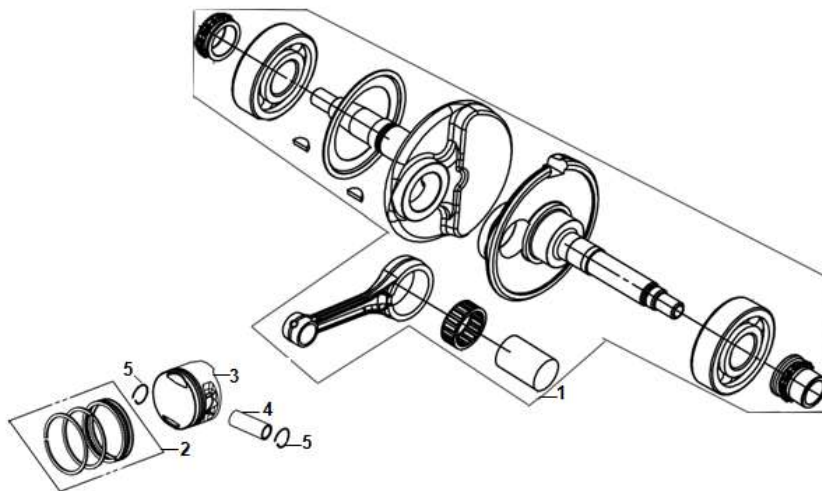 


Pictures reference only

 [illegible]

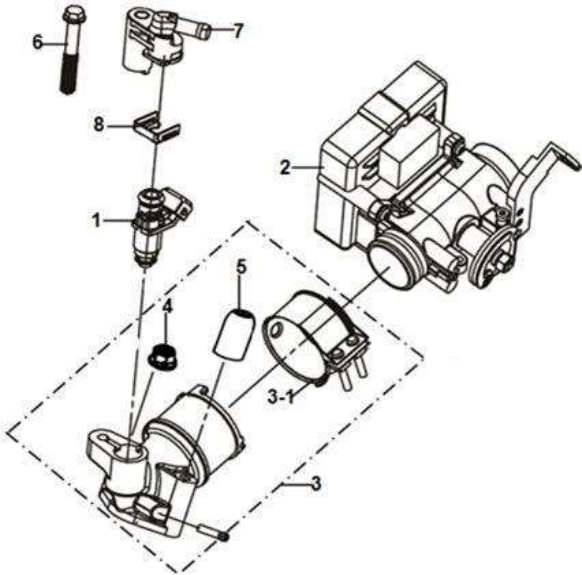


Pictures reference only

NO	PARTS NUMBER	DESCRIPTION-ZH	DESCRIPTION	QTY	EFFECTIVE DATE
01	06414-HKK-000	喷油嘴	Fuel injector	1	
02	1640A-X91-000	ECU总成	ECU set	1	
03	1711A-ZBC-000	进气管总成	Inlet pipe ASSY.(MA1-SFJ)	1	
03-1	17256-MA1-000	固定绑带	Insulator band	1	
04	94050-06000	缘面螺帽6MM	Flange nut 6MM	1	
05	90086-MA1-000	特殊螺帽	Special nut	1	
06	96001-06045-00	缘面螺栓6*45	SH. flange bolt 6*45	1	
07	17120-XJA-000	喷油嘴盖总成	Fuel injector cap ASSY.	1	
08	17121-H6Y-000	喷油嘴夹扣	Fuel injector cap clip	1	

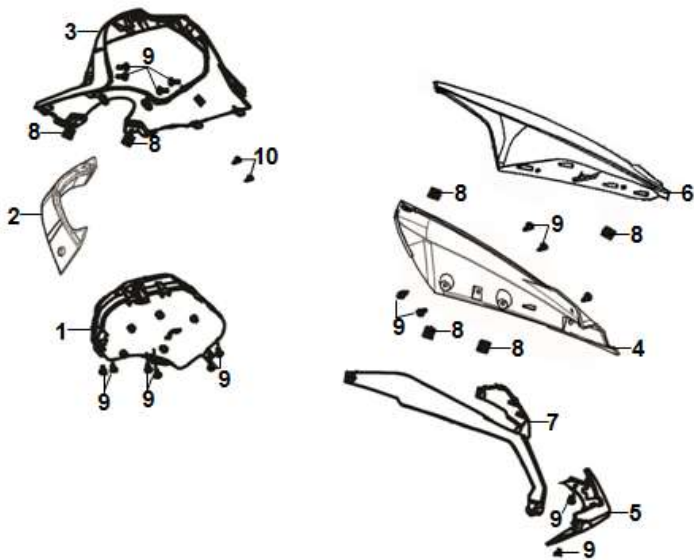 


Pictures reference only

NO	PARTS NUMBER	DESCRIPTION-ZH	DESCRIPTION	QTY	EFFECTIVE DATE
01	37200-X91-010-C	仪表	Speedmeter ASSY	1	
02	53206-X8A-000	把手下盖B	Handle down cover B	1	
03	53208-X9B-000	仪表板	Meter panel	1	
04	53209-X9B-000	仪表挡风板	Meter visor	1	
05	64303-X8A-000	大灯下盖	Head light low cover	1	
06	67100-X8A-000	挡风镜	Wind screen	1	
07	67110-X8A-000-F1	风镜装饰块(素材件)	Wind screen garnish	1	
08	90302-SA4-900	夹片螺帽4MM	Spring nut 4mm	6	
09	93903-35240	自攻螺栓5*12	Tapping screw 5*12	17	
10	93903-34340	自攻螺栓4*12	Tapping screw 4*12	2	

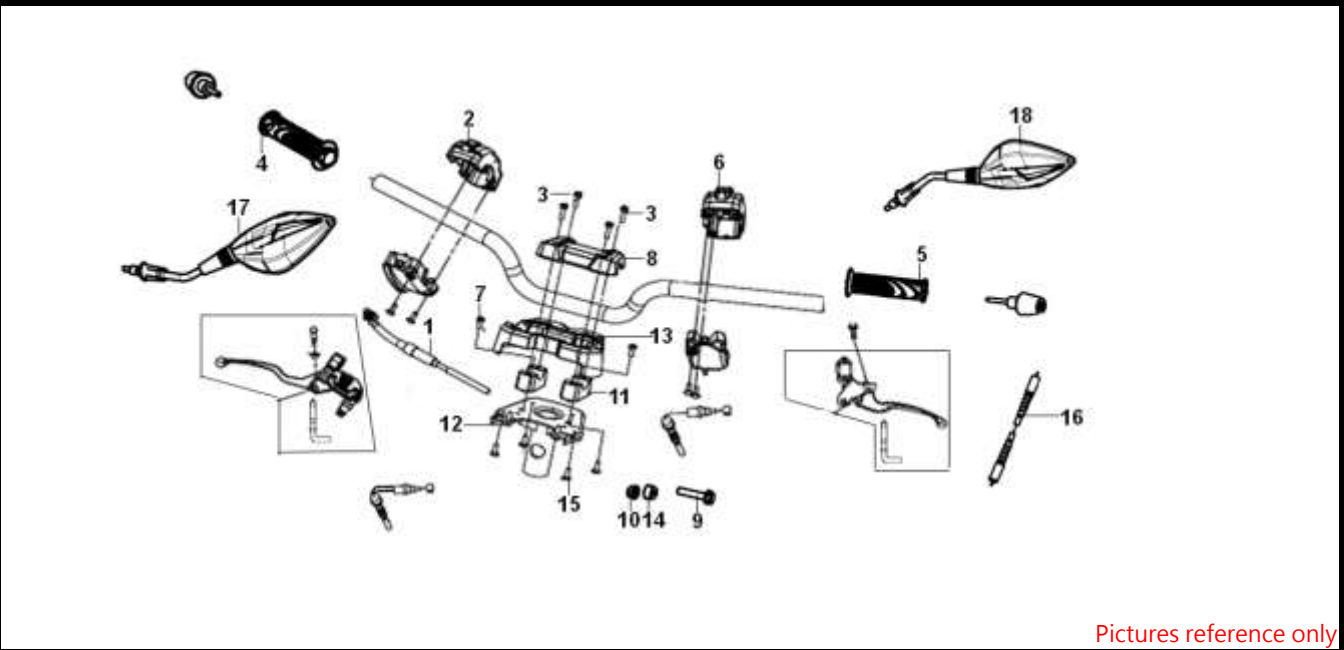 


NO	PARTS NUMBER	DESCRIPTION-ZH	DESCRIPTION	QTY	EFFECTIVE DATE
01	17910-X8A-000	节流管导线	Throt cable COMP	1	
02	35150-X9C-000	右把手开关	R. handle SW.	1	
03	96700-06028-49	内六角螺栓	Socket bolt 6*28	4	
04	53140-XPA-000	右把手节流管	RH. HNDL. grip	1	
05	53166-XPA-000	左把手节流管	LH. HNDL. grip	1	
06	35200-X82-000	左把手开关	L. handle SW. UNIT	1	
07	96700-08020-02	内六角螺栓	Socket bolt 8*20	2	
08	53131-AWU-000-KH	方向把手上固定座(银白)	HNDL. pipe up. holder	1	
09	90106-AAA-000	六角缘面螺栓(军绿)	FR. disk bolt	1	
10	90304-AAA-000	自锁螺帽(军绿)	Flange. u nut 10mm	1	
11	53132-AWU-000	方向把手下固定座(银白)	Handle pipe down hodler	2	
12	53231-X8A-000	把手固定座	Handle pipe holder COMP	1	
13	53205-X8A-000	手把前盖	handle down cover	1	
14	53125-CT1C-A00	方向把手圆套12*21*12	HNDL. set collar	1	
15	93903-35340	自攻螺丝	Tapping screw 5*16	4	
16	44870-L4C-000	ABS轮速计	Speedometer cable COMP	1	
17	88110-XPA-000-K	右后视镜	R. RR. back mirror	1	
18	88120-XPA-000-K	左后视镜	L. back mirror	1	

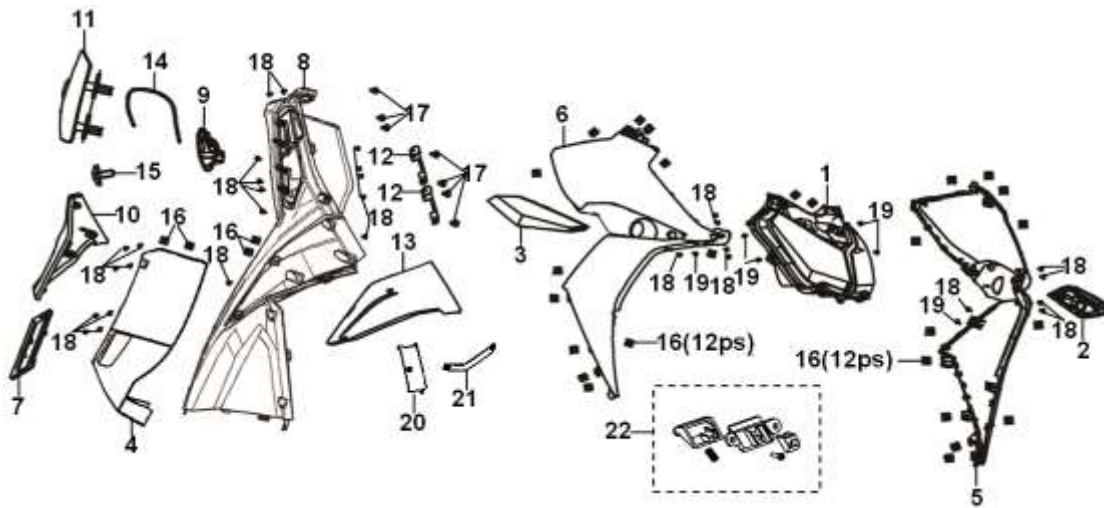 


Pictures reference only

NO	PARTS NUMBER	DESCRIPTION-ZH	DESCRIPTION	QTY	EFFECTIVE DATE
01	33100-X8A-000	头灯总成	Head light ASSY.	1	
02	33450-X8A-000	前左方向灯	FR. L. winker ASSY	1	
03	33400-X8A-000	前右方向灯	FR. R. winker ASSY	1	
04	64300-X8A-000	前护板	FR. UND. cover	1	
05	64302-X8A-000-F1	左前面板(素材件)	L FR. COVER	1	
06	64301-X8A-000-F1	右前面板(素材件)	R FR. COVER	1	
07	64318-ALA-000-BK	车架号码盖(黑色)	Frame number lid	1	
08	81131-X8A-810	内置物箱	Inner box	1	
09	81132-X8A-000	行李挂钩	Luggage hook	1	
10	81143-X8A-000-F1	置物箱左标微(素材件)	LH. Inner box garnish	1	
11	81141-X8A-010	内置物箱盖	Inner box lid	1	
12	81142-X8A-000	置物箱压板	Inner box lid garnish	2	
13	81133-X8A-000-F1	置物箱右标微(素材件)	RH. Inner box garnish	1	
14	81146-X8A-000	置物箱封垫	Inner box seal	1	
15	96001-06016-04	缘面螺栓 6*16	SH. flange bolt 6*16	1	
16	90302-SA4-900	夹片螺帽 4MM	Spring nut 4mm	30	
17	93903-34340	自攻螺栓 4*12	Tapping screw 4*12	7	
18	93903-35240	自攻螺栓 5*12	Tapping screw 5*12	30	
19	93903-35340	自攻螺栓 5*16	Tapping screw 5*16	6	
20	81151-X8A-000	挡水盖	Splash board cover	1	
21	81161-X8A-000	前置物箱挡片	Inner box screen	1	
22	8116A-L9M-000-TW	置物箱盖锁	Inner box lid lock ASS'Y	1	

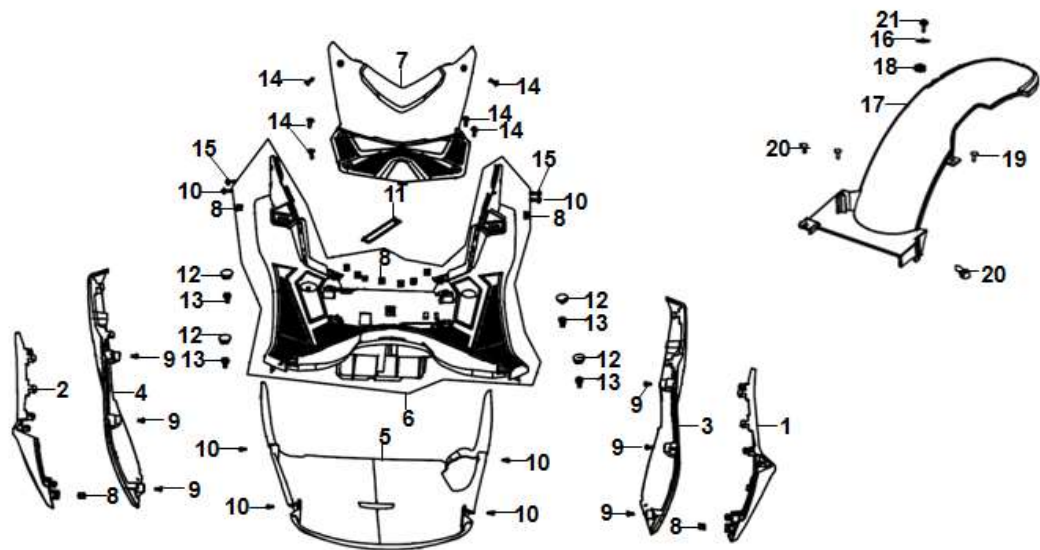 


Pictures reference only

NO	PARTS NUMBER	DESCRIPTION-ZH	DESCRIPTION	QTY	EFFECTIVE DATE
01	83520-X8A-000	右前边条	RH. FR. side cover	1	
02	83620-X8A-000	左前边条	LH. FR. side cover	1	
03	83530-X8A-000-F1	右后边条(素材件)	RH. RR. side cover	1	
04	83630-X8A-000-F1	左后边条(素材件)	LH. RR. side cover	1	
05	50611-APA-000	底盖	Under cover	1	
06	64310-X8A-000	脚踏板	Floor panel	1	
07	50326-X8A-000	电瓶盖	Battery cover	1	
08	90302-SA4-900	夹片螺帽 4MM	Spring nut 4mm	11	
09	93903-24340	自攻螺栓 4*12	Tapping screw 4*12	6	
10	93404-06016-00	垫片螺栓 6*16	Washer bolt 6*16	6	
11	50324-X8A-000	电瓶压板	Battery band	1	
12	50612-APA-000	脚踏塞孔橡皮	FLOOR STEP CAP A	4	
13	90111-AAA-000	缘面台阶螺栓6MM(军绿)	Flange bolt 6mm (GREEN)	4	
14	93903-45240	自攻螺栓5*12	Tapping screw 5*12	6	
15	90118-ALA-000	特殊螺丝	Washer screw 5x14	2	
16	64306-X01-000	前衬套	Collar	1	
17	80105-X8A-000	后内挡泥板	RR. mudguard	1	
18	90106-ABA-000	六角缘面螺栓(军绿)	FR. disk bolt	1	
19	93903-34180	自攻螺栓4*8	Tapping screw 4*8	1	
20	95701-06012-04	六角缘面螺栓6*12	Flange bolt 6*12	4	
21	95801-06025-04	六角缘面螺栓6*25	Flange bolt 6*25	1	

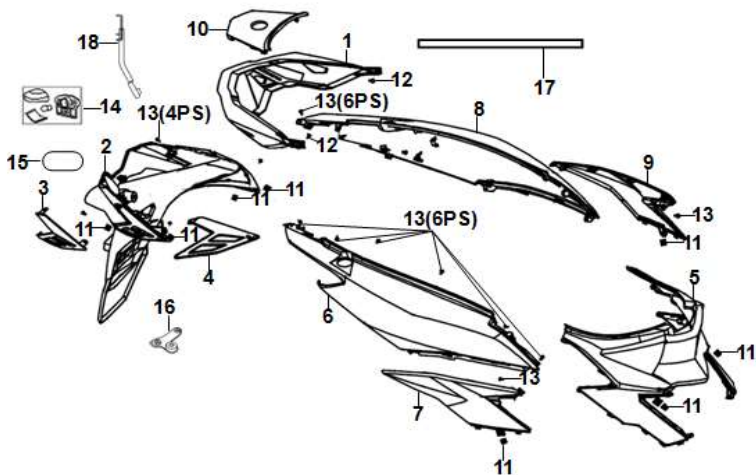 


Pictures reference only

NO	PARTS NUMBER	DESCRIPTION-ZH	DESCRIPTION	QTY	EFFECTIVE DATE
01	33700-X8A-000	尾灯	Tail light ASSY	1	
02	80100-X8A-000	后挡泥板	RR. fender	1	
03	80107-X8A-000	右后挡泥板标徽	RH. RR. fender garnish	1	
04	80108-X8A-000	左后挡泥板标徽	LH. RR. fender garnish	1	
05	80151-X8A-000	中心盖	Center cover	1	
06	83500-X8A-000-F1	右车体盖(素材件)	R BODY COVER	1	
07	83510-X8A-000-F1	右下车体盖(素材件)	R. Body lower cover	1	
08	83600-X8A-000-F1	左车体盖(素材件)	L BODY COVER	1	
09	83610-X8A-000-F1	左下车体盖(素材件)	L. Body lower cover	1	
10	83650-X8A-000-F1	后中央盖(素材件)	RR center cover	1	
11	90302-SA4-900	夹片螺帽 4MM	Spring nut 4mm	8	
12	93903-24340	自攻螺栓 4*12	Tapping screw 4*12	2	
13	93903-35240	自攻螺栓 5*12	Tapping screw 5*12	18	
14	33740-Z6A-000	牌照灯	License light	1	
15	33741-N7B-E10	后反光片	RR. reflector	1	
16	80106-ZBC-000	后土除支架	RR. Mudguard plate	1	
17	80103-ARA-000	车体盖橡皮	Body cover rubber	1	
18	50110-X8A-000	后挡泥板支架	RR. fender stay	1	

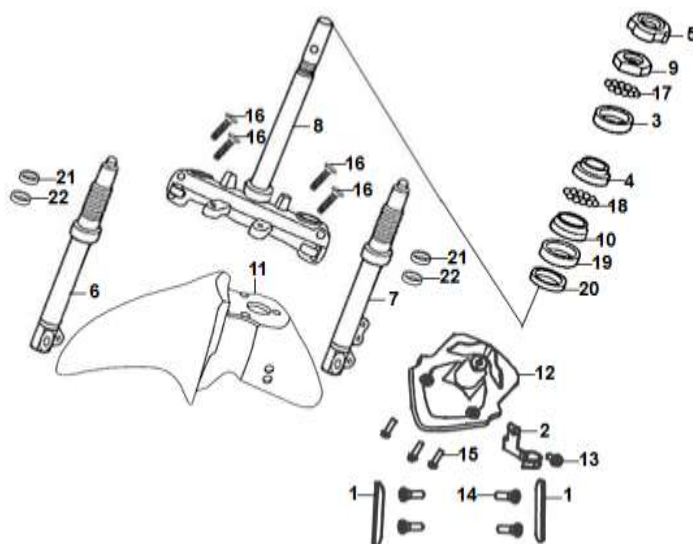 


Pictures reference only

NO	PARTS NUMBER	DESCRIPTION-ZH	DESCRIPTION	QTY	EFFECTIVE DATE
01	33742-X8A-000	前侧反光片	Side reflector	2	
02	45156-AAA-000	前刹车油管管夹	FR brake hose clamp	1	
03	50301-M9Q-000-XS	上钢珠座	STRG. up race ball	1	
04	50302-M9Q-000-XS	下钢珠座	Ball race	1	
05	50306-M9Q-000-XS	转向锁付螺帽	STRG. stem lock nut	1	
06	51400-X8A-000-K-C	右避震总成	FR. RH. cushion ASSY	1	
07	51500-X8A-000-K-C	左避震总成	FR. LH. cushion ASSY	1	
08	53200-X8A-000	转向主干组	Steering stem COMP	1	
09	53211-M9Q-000-CN2	转向首环	STRG. top cone race	1	
10	53212-M9Q-000-XS	钢珠圈	Race cone	1	
11	61100-X8A-000-F1	前挡泥板(素材件)	FR. fender	1	
12	61110-X8A-000	前内挡泥板	FR. inner mudguard	1	
13	90115-ATA-000	缘面螺栓6*16	Flange bolt 6*16	1	
14	90164-AAA-000	特殊螺钉	Special screw 6mm (GREEN)	4	
15	95801-06014-07	缘面螺栓6*14	Flange bolt 6X14	3	
16	95801-08040-00	缘面螺栓8*40	Flange bolt 8X40	4	
17	50303-AAA-000	上钢珠圈	Up steel balls and retainer ASSY	1	
18	50304-AAA-000	下钢珠圈	Lower steel balls and retainer ASSY	1	
19	53214-M9Q-000	主杆防尘封	STRG. head dust seal	1	
20	53215-M9Q-000	主干防尘封垫圈	STRG. head dust seal washer	1	
21	51403-APA-000	油封	Oil seal	2	
22	51404-APA-000	防尘封	Dust seal	2	

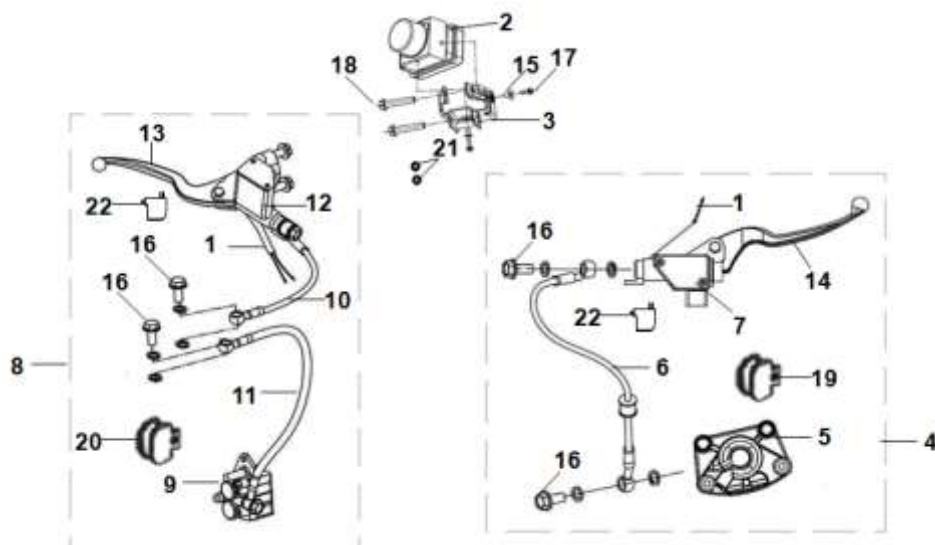 


Pictures reference only

NO	PARTS NUMBER	DESCRIPTION-ZH	DESCRIPTION	QTY	EFFECTIVE DATE
01	35342-AE1-000	前刹车开关线	FR stop SW cord COMP.	2	
02	38730-XMC-000	ABS控制器	ABS. hydraulic circuit unit(fill)	1	
03	38731-XMC-000	ABS控制器支架	ABS hydraulic circuit unit support	1	
04	4350A-X9A-000	后刹车泵总成	RR brake ASSY(CALIPER SILVER)	1	
05	43100-XJA-000	后夹具总成	RR. caliper ASSY	1	
06	43126-ZAG-000	后刹车管	RR. brake hose COMP	1	
07	43500-ARB-010	后刹车上泵	RR. M/C ASSY	1	
08	4550A-X9A-000	前刹车泵总成	FR brake ASSY(CALIPER SILVER)	1	
09	4510A-X9A-000	前夹具总成	FR lower brake COMP	1	
10	45124-XMC-000	前刹车油管A	FR brake hose A COMP.	1	
11	45125-X9A-000	前刹车油管B	FR brake hose B COMP.	1	
12	4550B-X9A-000	前刹车上泵	FR up brake COMP	1	
13	53175-T6V-000-XS	右把手拉杆	R. lever STRG. handle	1	
14	53178-ARB-010	左把手拉杆	L. STRG. handle lever	1	
15	61201-B9A-000	衬套	FR. fender collar	2	
16	90145-M9Q-000	油泵螺栓10*22	Oil bolt 10*22	4	
17	95801-06018-04	缘面螺栓6*18	Flange bolt 6*18	2	
18	95801-08045-04	缘面螺栓8*45	Flange bolt 8X45	2	
19	43105-ARB-000-A	后刹车来令片总成	RR.brake pad COMP	1	
20	45105-APA-000-A	前刹车来令片总成	FR.brake pad COMP	1	
21	64304-B9A-000	橡皮	Rubber	2	
22	35340-ARB-000	刹车灯开关	RR. stop switch	2	

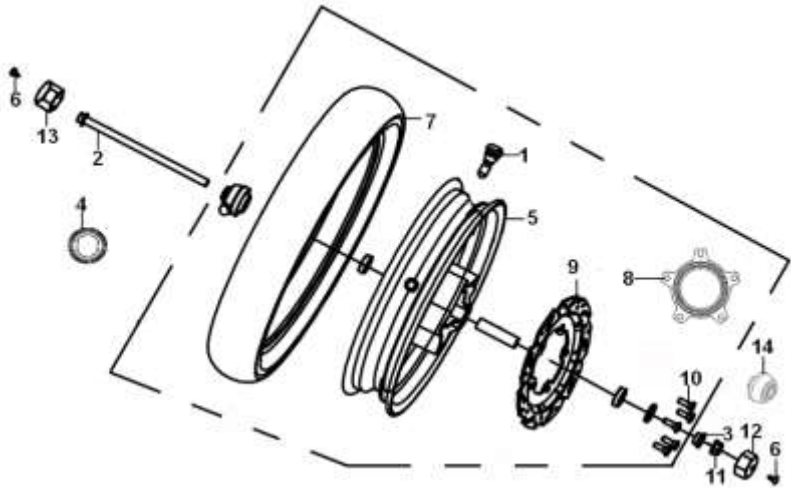 


Pictures reference only

NO	PARTS NUMBER	DESCRIPTION-ZH	DESCRIPTION	QTY	EFFECTIVE DATE
01	42753-ABA-000	气门嘴	Rim valve	1	
02	44301-APG-900	前轮轴	FR. wheel axle	1	
03	44311-GW0-910	前轮侧衬套	Collar FR. wheel side	1	
04	91258-M9Q-000	速度表齿轮封垫	Speedometer gear box seal	1	
05	44600-X9A-000	前轮轮圈	FR. cast wheel COMP	1	
06	93600-04010-04	平头螺钉	Flat screw 4*10	2	
07	44710-X8A-000	前轮轮胎	FR. tire	1	
08	45120-XMC-000	前轮速读取盘	FR ABS detective disk	1	
09	45121-XMC-000	前刹车碟盘	FR. brake disk	1	
10	90106-N02-000	前碟盘螺栓8*24	FR. disk bolt 8X24	5	
11	90306-X11-000	自锁螺帽12MM	Self lock nut 12MM	1	
12	44314-N7B-E10	左前轮轴橡皮	L. FR. wheel axle rubber	1	
13	44315-N7B-E10	右前轮轴橡皮	R. FR. wheel axle rubber	1	
14	44312-ZBC-000	前轮轴左侧衬套	FR. wheel L. side collar	1	

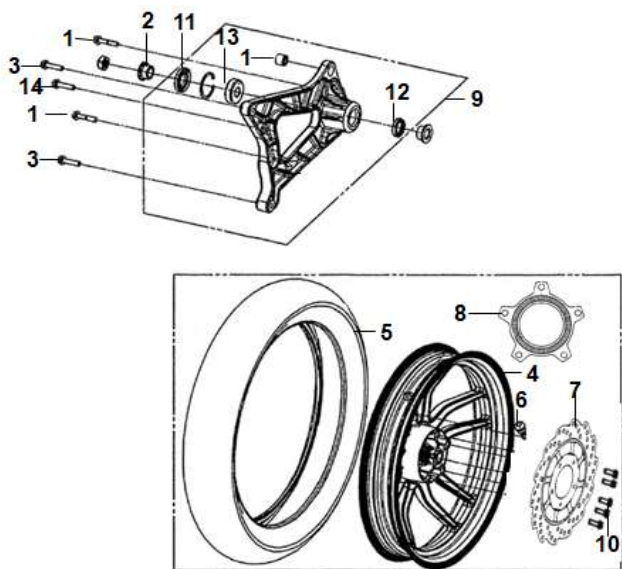 


Pictures reference only

NO	PARTS NUMBER	DESCRIPTION-ZH	DESCRIPTION	QTY	EFFECTIVE DATE
01	95801-08064-07	六角缘面螺栓8*64	Flange bolt 8*64	2	
02	42311-X81-000	后轮轴套环	RR. axle collar	1	
03	95801-08045-07	六角缘面螺栓8*45	Flange bolt 8*45	2	
04	42601-X81-000	后轮轮圈	RR. cast wheel COMP	1	
05	42710-X8A-000	后轮胎	RR. tire	1	
06	42753-ABA-000	气门嘴	Rim vavle	1	
07	43121-XJA-000	后刹车盘	RR. brake disk(silver)	1	
08	43120-XJE-000	后轮速读取盘	RR ABS detective disk	1	
09	5210A-ZBC-000	后叉总成	RR. fork ASSY	1	
10	90106-N02-000	后刹车盘螺栓	RR. disk bolt	5	
11	90754-H9A-000	防尘封26*47*7	Dust seal 26*47*7	1	
12	90755-ARB-000	防尘封26*36*7	Dust seal 26*36*7	1	
13	91051-H9A-000	轴承	Ball radial bearing	1	
14	95801-08035-07	六角缘面螺栓8*35	Flange bolt 8*35	1	

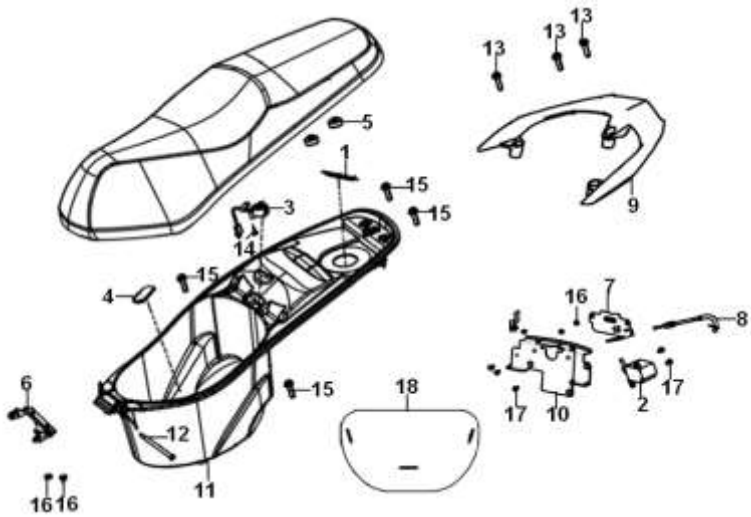 


Pictures reference only

NO	PARTS NUMBER	DESCRIPTION-ZH	DESCRIPTION	QTY	EFFECTIVE DATE
01	17506-XPA-000	导油盘	Fuel guide rubber	1	
02	35870-HLA-000	电磁阀	Dc SOL. ASSY	1	
03	36600-A1A-010	引擎启动自动开关	Eng. Start control SW.	1	
04	70529-APA-000	化油器盖橡皮	Carb maint rubber	1	
05	50352-ADB-000	制动橡皮	Link stopper rubber	2	
06	77201-AAA-000	座垫合叶	Seat hinge comp.	1	
07	77230-APA-000	座垫挂钩	Seat catch comp.	1	
08	77240-XPA-000	座垫锁导线	Seat lock cable	1	
09	81200-X8A-000-K	后货架	RR. Carrier	1	
10	81207-XPA-000	座垫锁支架	Seat catch stay	1	
11	81250-XPA-000	置物箱	Luggage box	1	
12	90105-HHA-000	座垫枢纽螺丝	Seat hing screw	1	
13	90106-B9A-000	特殊螺栓8*45	Special bolt 8x45	3	
14	93903-44340	自攻螺栓4*12	Tapping screw 4*12	1	
15	90115-ATA-000	特殊螺丝(军绿)	Bolt hndl lever pivot	4	
16	94050-06040	六角缘面螺帽6MM	Flange nut 6mm	5	
17	95701-06012-04	六角缘面螺栓6*12	Flange bolt 6*12	5	
18	80104-ZBC-000	防溅板	Splash board plate	1	

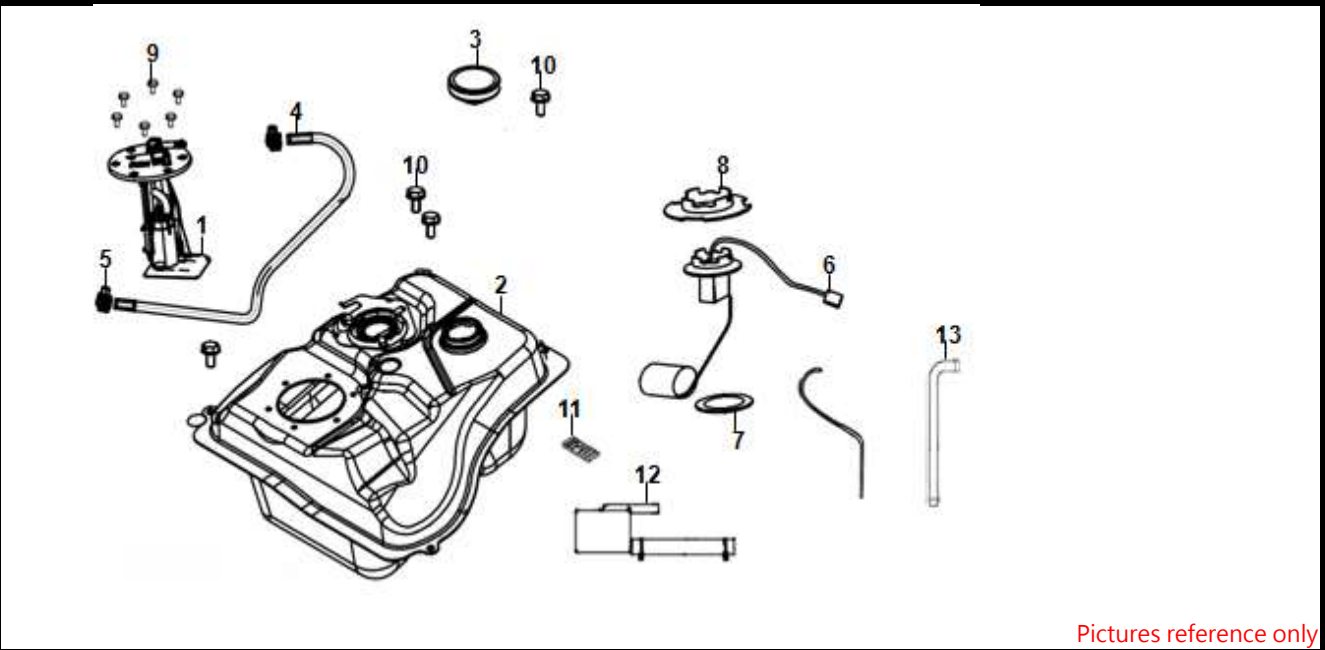 


Pictures reference only

NO	PARTS NUMBER	DESCRIPTION-ZH	DESCRIPTION	QTY	EFFECTIVE DATE
01	16700-XMA-000	汽油泵	Fuel pump comp.	1	
02	17500-XMB-000	油箱	Fuel tank comp.	1	
03	17620-XH1-020	油箱盖	Fuel filter cap comp	1	
04	17682-X8A-000	油管总成	Fuel strainer hose	1	
05	19505-H5D-000-TW	软管夹	Hose clamp	1	
06	37800-XPA-010	油量计	Fuel unit assy	1	
07	37801-M9Q-000	油量计垫圈	Base packing	1	
08	37802-M9Q-000	油量计护圈	Ret. Fuel unit	1	
09	90116-Z5C-000	特殊螺栓	Fuel pump. Bolt	6	
10	96001-06010-08	六角缘面螺栓	Flange bolt sh. 6*10	4	
11	17508-X8A-000	油箱漏水管	Fuel tank center cushion	1	
12	17580-XMB-000	汽油回收阀	Fuel cut valve	1	
13	17685-X81-000	碳罐 - 化油器管	CANI. - CARB. tube	1	

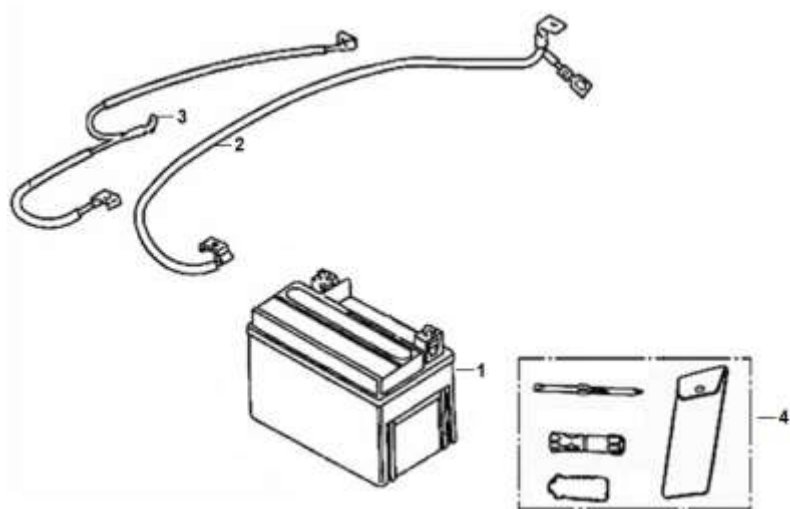 


Pictures reference only

 [illegible]

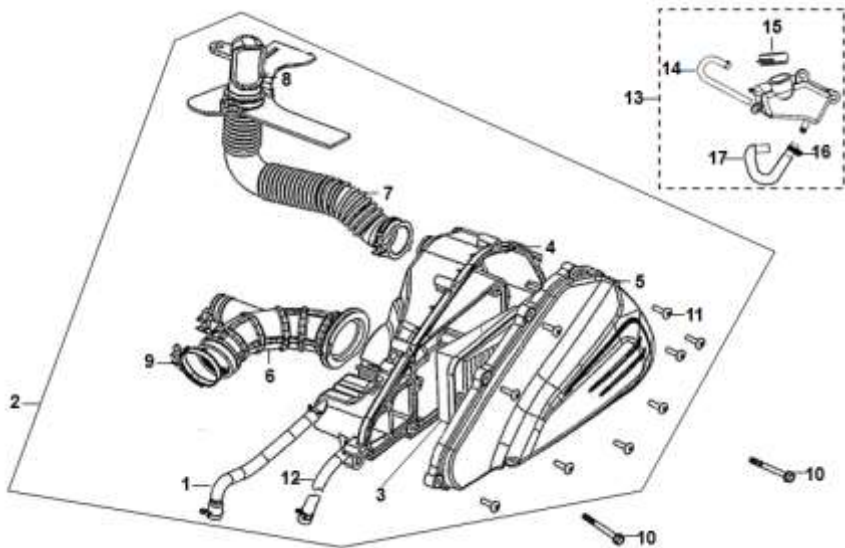


Pictures reference only

NO	PARTS NUMBER	DESCRIPTION-ZH	DESCRIPTION	QTY	EFFECTIVE DATE
01	11211-ZBC-000	通气管	Breather tube	1	
02	17200-X91-010	空滤器总成	AIR cleaner ASSY.	1	
03	17211-ADB-000	滤芯组	AIR/C element COMP.	1	
04	17230-ZBC-000	空滤箱	AIR/C case COMP.	1	
05	17231-APA-000	空滤盖	AIR/C cover COMP.	1	
06	17253-XMA-010	空滤连接管	AIR/C connecting tube	1	
07	17257-APA-000	导风橡皮管A	AIR/C duct A	1	
08	17258-APA-000	导风橡皮管B	AIR/C duct B	1	
09	90652-M9Q-000	空滤器连接管管夹	AIR/C. CONN. tube band 48	1	
10	93404-06030-07	垫片螺栓	Washer bolt 6*30	2	
11	93903-25480	盘头螺钉5*20	Tapping screw 5*20	9	
12	95003-23028-60	U型管	V tube 8*12*280	1	
13	1910A-X81-000	副水箱总成	Reserve tank ASSY	1	
14	19509-X81-010	副水箱水管B	RES. tank water tube B	1	
15	19104-M9Q-000	副水箱盖	Reserve tank cap	1	
16	90682-V02-900	软管夹	Tubre clamp D11.5	2	
17	19507-X81-000	副水箱水管A	RES. tank water tube A	1	

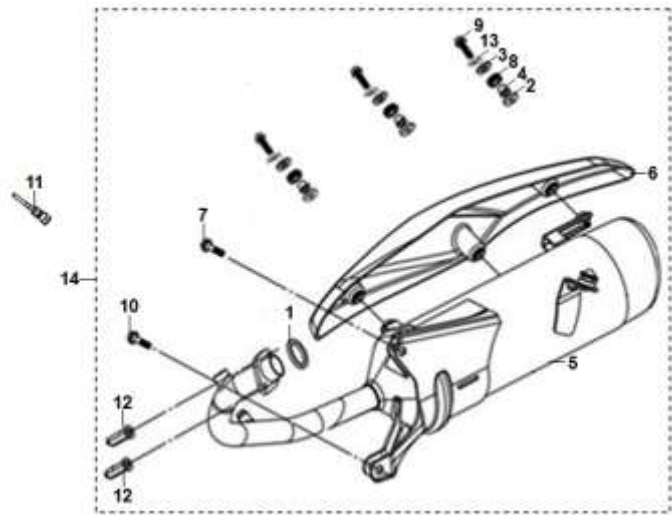 


Pictures reference only

NO	PARTS NUMBER	DESCRIPTION-ZH	DESCRIPTION	QTY	EFFECTIVE DATE
01	18291-Z8G-000	排气管接头垫片	EXH. pipe gasket(26.2x33)	1	
02	18292-F3E-000	非石棉垫片A	Protector packing A	4	
03	18293-F7S-000	非石棉垫片B	Protector packing B	4	
04	18295-F3E-000	M6衬套	Collar M6	4	
05	18300-X92-000	排气管	EXH. muffler COMP	1	
06	18317-XPA-000-K	护热盖(黑色)	Muffler protector COMP(BLACK)	1	
07	95801-X81-000	缘面螺栓	Flange bolt 8x40	1	
08	18320-F3E-000	护热橡皮	Protector rubber	4	
09	96001-06022-49	螺栓	Bolt6*22	4	
10	95801-Z5D-000	缘面螺栓	Flange bolt8*65	2	
11	3789A-XJE-000	含氧感知器	O2 sensor ASSY.	1	
12	90043-XB1-000	螺帽 8mm	Cap nut 8mm	2	
13	90555-AMA-000	垫圈	Washer	4	
14	18000-X92-000-K-C	排气管	EXH muffler ASSY	1	

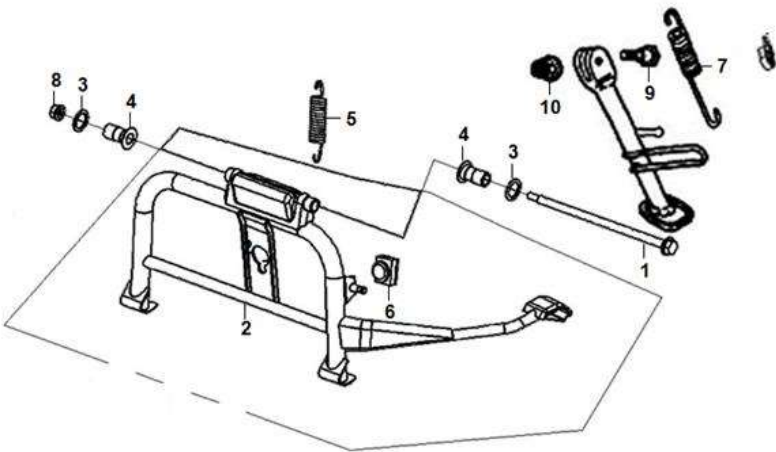 


Pictures reference only

NO	PARTS NUMBER	DESCRIPTION-ZH	DESCRIPTION	QTY	EFFECTIVE DATE
01	50512-ARA-000	缘面螺栓	Flange bolt	1	
02	50500-X81-000	主脚架	Main stand COMP	1	
03	50503-F6B-000	主脚架垫片	Main stand washer	2	
04	50504-Z6A-000	主脚架衬套	Main stand collar	2	
05	5052A-APA-900	主脚架弹簧	Main stand SPG.ASSY	1	
06	50506-ABA-000	制止橡皮	Stand stop rubber A	1	
07	50535-Z7C-000	侧脚架弹簧	Side stand SPG. ASSY	1	
08	90309-M9Q-900	自锁螺母8MM	Self-lock nut 8MM	1	
09	90108-Z7C-010	侧脚架螺栓	Side stand pivot screw	1	
10	90309-N7C-000	锁紧螺母	Self-lock nut 8mm	1	

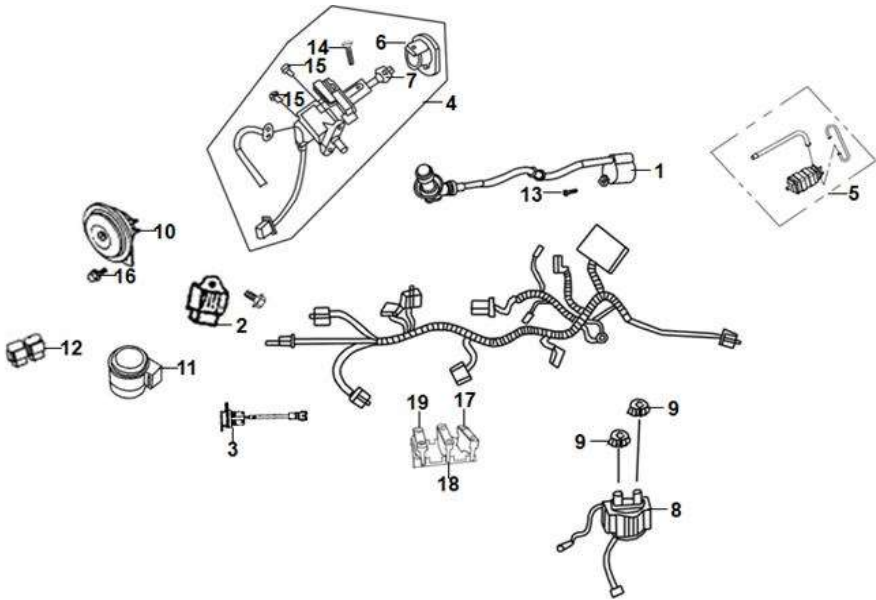 

pictures reference only

NO	PARTS NUMBER	DESCRIPTION-ZH	DESCRIPTION	QTY	EFFECTIVE DATE
01	3051A-X81-010	高压包总成	IGN. COIL. ASSY	1	
02	31600-MA1-000	整流器	REG. REC. COMP	1	
03	38650-XGA-000	USB接头	USB CHARGE UNIT	1	
04	35010-X8A-010	套锁	Key set	1	
05	1730A-X8A-000	碳罐	Canister set	1	
06	35114-ALA-000	锁帽	Main SW.cover	1	
07	35111-XGA-000	钥匙	Key	1	
08	3585A-35A-A00	起动磁性开关	MAG. SW. COMP	1	
09	35859-M9Q-000	起动磁性开关螺帽	Start MAG. SW. NUT	2	
10	38100-N7B-E10	喇叭	Horn COMP	1	
11	38300-T40-010	闪光器	Ap winker relay ASSY	1	
12	3850A-HLA-100-A1-VN	启动继电器	ELEC. relay ASSY	3	
13	90112-H5B-000	高压包螺栓4mm	COIL SCREW 4mm	2	
14	93891-05008-08	垫片螺钉 5*8	Screw washer 5X8	1	
15	90085-HHA-900	缘面螺栓6*16	Flange bolt 6X16	2	
16	95801-08012-08	缘面螺栓 8*12	Flange bolt 8X12	1	
17	98200-31500	插入式保险丝15A	Blade fuse 15A	1	
18	98200-32000	片式保险丝20A	Plate fuse 20A	1	
19	98200-33000	插入式保险丝30A	Blade fuse 30A	1	

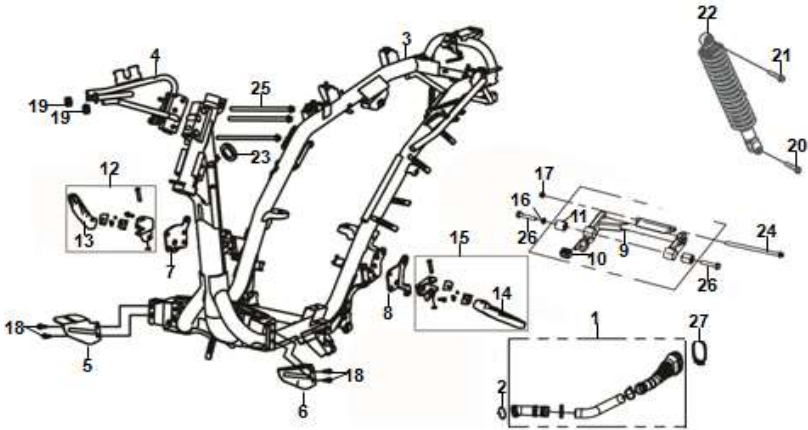 

Pictures reference only

NO	PARTS NUMBER	DESCRIPTION-ZH	DESCRIPTION	QTY	EFFECTIVE DATE
01	1134C-ARA-000	左盖冷却导管总成	L. cover duct T ASSY	1	
02	17242-M9Q-000	空气滤芯束带	AIR/C duct BAND	1	
03	50100-X8A-000	车架	Frame body COMP.	1	
04	50180-X8A-000	前盖支架	Front cover stay	1	
05	50181-X8A-010	脚踏板支架A	Floor panel stay A	1	
06	50182-X8A-010	脚踏板支架B	Floor panel stay B	1	
07	50183-X8A-000	右脚踏支架	RH. step STAY	1	
08	50184-X8A-000	左脚踏支架	LH. step STAY	1	
09	50351-X81-000	引擎悬吊	ENG. hanger COMP	1	
10	50352-ADB-000	制动橡皮	Link stopper rubber	1	
11	50353-M9Q-000	衬套	Swing lock bush	2	
12	50710-X8A-000	右脚踏组	RH. pillion step ASSY	1	
13	50715-APA-000	右脚踏	RH. pillion step	1	
14	50718-APA-000	左脚踏	LH. pillion step	1	
15	50720-X8A-000	左脚踏组	Lh. Pillion step ASSY	1	
16	90121-M9Q-900	轴环	Distance collar	1	
17	90304-M9Q-000	自锁螺帽(军绿)	Flange. U nut 10mm	1	
18	95801-06012-04	垫片螺栓 6*12	Washer bolt 6*12	4	
19	94050-06040	缘面螺帽	Flange nut 6*40	2	
20	95801-08035-04	六角缘面螺栓	Flange bolt 8*35	1	
21	95801-10035-04	六角缘面螺栓	Flange bolt 10*35	1	
22	52400-AR1-010-K-C	后避震(黑色)	Rr. Cushion ASSY	2	
23	64306-X01-000	前面板衬套	Inner box sponge	1	
24	90105-ARA-000	特殊螺栓10*191	Special bolt 10*191	1	
25	90105-APA-000	特殊螺栓8*45	Special bolt 8x45	3	
26	90106-ABA-000	缘面螺栓(军绿)	Flange bolt 6*25	2	
27	11346-ABA-000	左冷却导管束带 (管夹)	L cover duct band	1	